

REMOVE CHAIN GUARD


This tutorial shows how to remove the chain guard from the XE-1

1. Remove Chain Guard


TOOLS REQUIRED

ID	Description	Task
	2.5 mm Hex Drive / Allen Key	Loosen 8 Gauge Machine Screws

1.1 Remove the five 8-Gauge Machine Screws that is used to attach the Chain Guard to the RH Rear Buoyancy. [Tools: 2.5 mm Hex Drive]

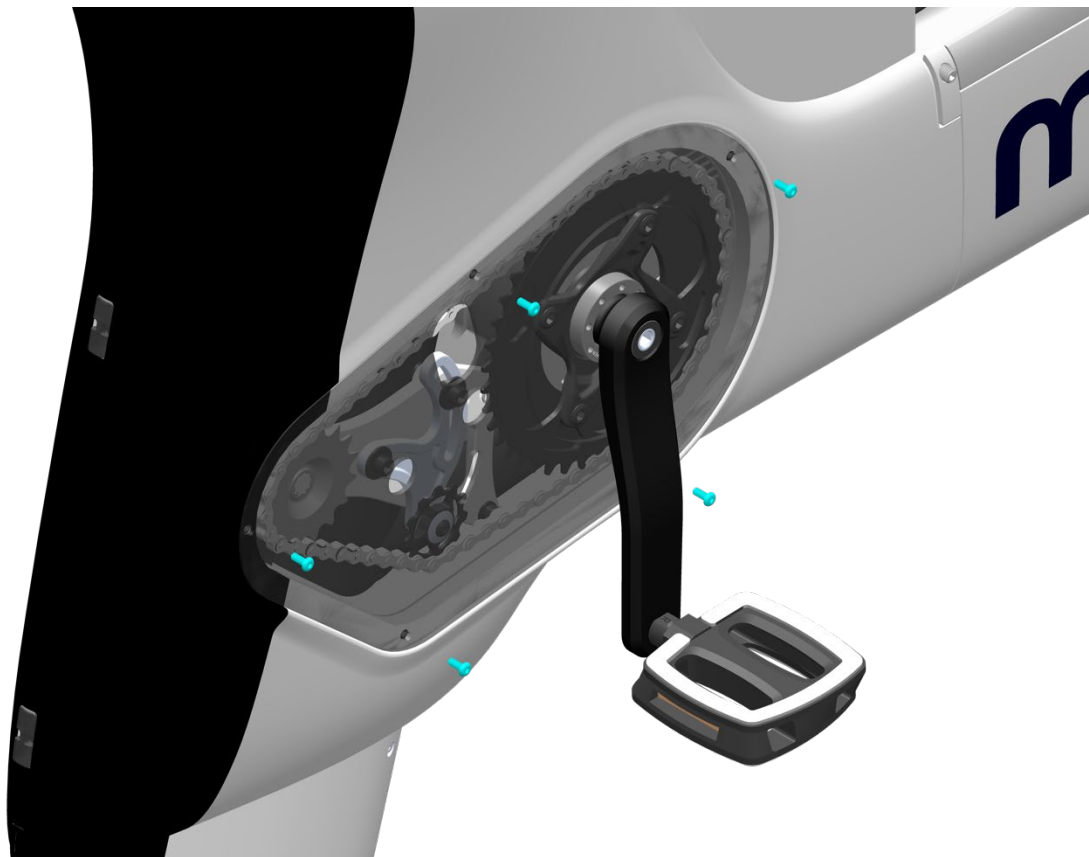

1.2 Remove the transparent acrylic Chain Guard over the RH Crank and Pedal.

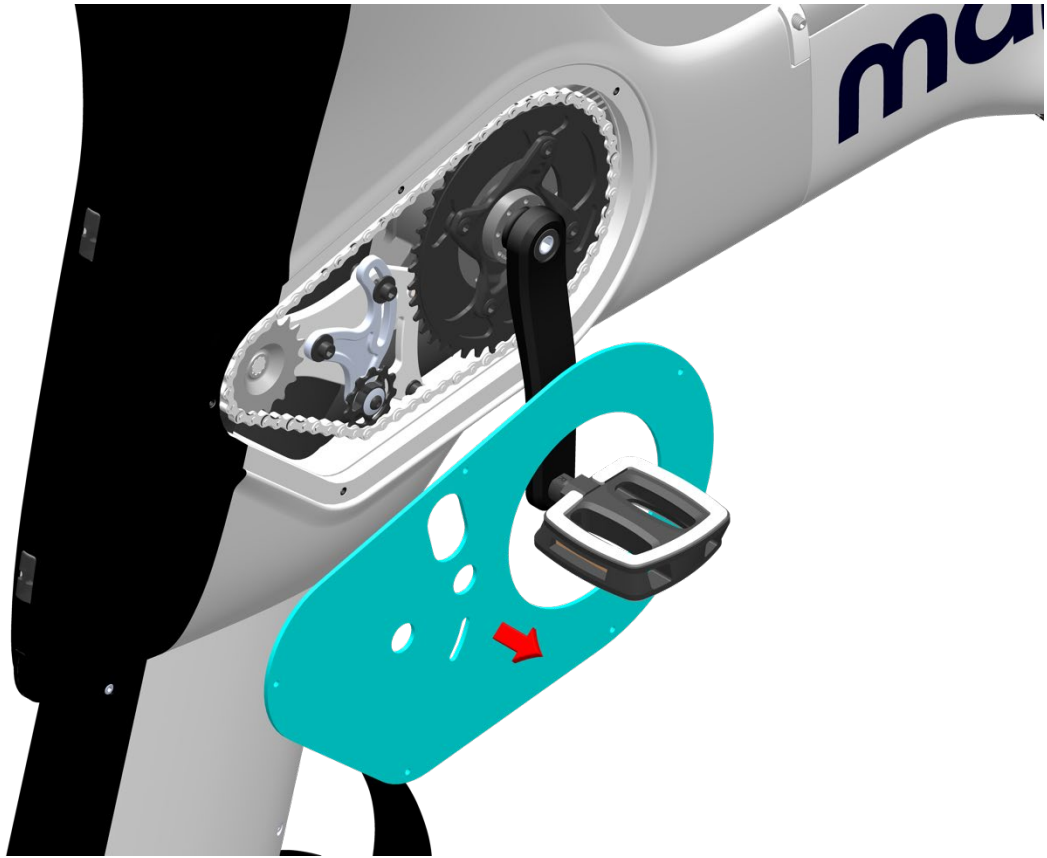

INFORMATION: Do not use solvents to clean the Chain Guard. Use warm soapy water (dishwashing liquid soap) instead.