


This tutorial shows how to remove the Chain Tensioner Bracket with Pulley from the XE-1

1. Remove Chain Tensioner Bracket with Pulley

TOOLS REQUIRED

ID	Description	Task
	M5 Hex Key	Loosen M6 Cap Screws

1.1 Loosen and remove 35 mm Aluminium Cap Screws with large 18 mm Washers [M5 Hex]

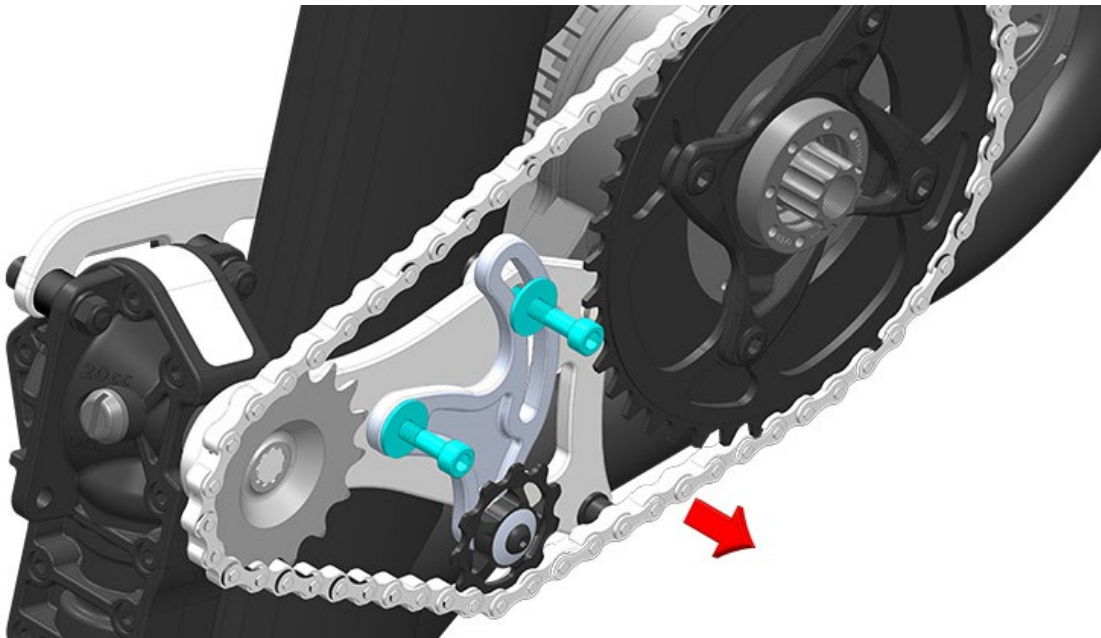

INFORMATION: Note that Tef-Gel lubricant rather than Loctite thread locker is used on the screws in this location to allow for the screws to be loosened and fastened regularly when adjusting Chain tension.

The M6 Chain Tensioner Bracket screws have a length of 35 mm and must not be replaced with shorter length screws. Using shorter screws may cause damage to the threads in the XE-1 Frame.

1.2 Remove Chain Tensioner Bracket with Pulley Assembly

