

This tutorial shows how to remove the Chain from the XE-1.

1. Remove Chain.

TOOLS REQUIRED

ID	Description	Task
	M5 Hex Key	Loosen M6 Cap Screws

1.1 Loosen the two M6 Cap screws securing the Chain Tensioner Bracket with Pulley (jockey wheel).



INFORMATION: For the purpose of removing the Chain, only loosen the screws by one or two turns sufficient to release Chain tension.

1.2 Push the Chain Tensioner Assembly upwards clear from the Chain.



1.3 Remove the Chain.



INFORMATION: The Chain is easily removed by derailing it from the Chainring by slowly rotating the Chainring gear while pushing the Chain to the side