

REMOVE CHAINRING ASSEMBLY

This tutorial shows how to remove the Chainring Assembly from the XE-1


<https://youtu.be/rYeuQPtZ5PY>

1. Work Instruction – Remove Chainring

TOOLS REQUIRED

ID	Description	Task
JP00060	TOOL, LOCKING RING, ISIS, WITH CORE, STD	Remove Chainring Spider Lock Nut (Ring)
	19 mm Ring or Open-Ended Wrench	Remove Chainring Spider Lock Nut (Ring)

1.1 Loosen and remove the Lock Nut by rotating the round nut clockwise with the Locking Ring tool.

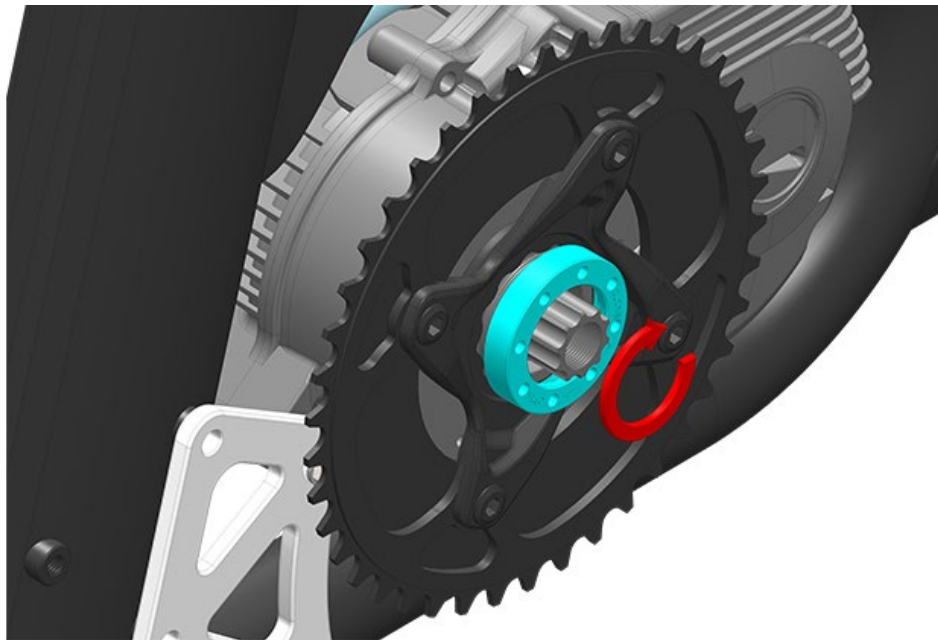

INFORMATION: Screw the tool core into the axle, place the main tool body with pins over the core and to engage the 8 Lock Nut holes. Using a 19 mm wrench, rotate the tool and nut clockwise to remove the lock nut. Use a chain whip (see attached video) to hold the Chainring and prevent it from rotating while loosening the locking nut.

1.2 Remove the Chain Ring Assembly by pulling off the Motor Drive Shaft Spline.

