

This tutorial shows how to remove the front tiller assembly from the XE-1

TOOLS REQUIRED

ID	Description	Task
	Hex Key 5mm	Remove M8 Countersink Head Screw

1. Work Instruction - Remove Front Tiller Assembly from Steering Fork Leg

1.1 Remove M8 Stainless Steel Screw (countersink head) and nylon washer and separate the front tiller assembly from the steering fork leg using a 5mm Hex Key.



1.2 Capture the nut on the Left-Hand side of the assembly to ensure that it is not lost.

