


This tutorial shows how to remove the Propeller Assembly from the XE-1.

1. Remove propeller assembly


TOOLS REQUIRED

ID	Description	Task
	17 mm Open Wrench	Loosen M10 Nylock Nut


1.1 While holding the Propeller to stop it from rotating, loosen and remove the Nose Cone by rotating it anti-clockwise. [Tools: By Hand Only].

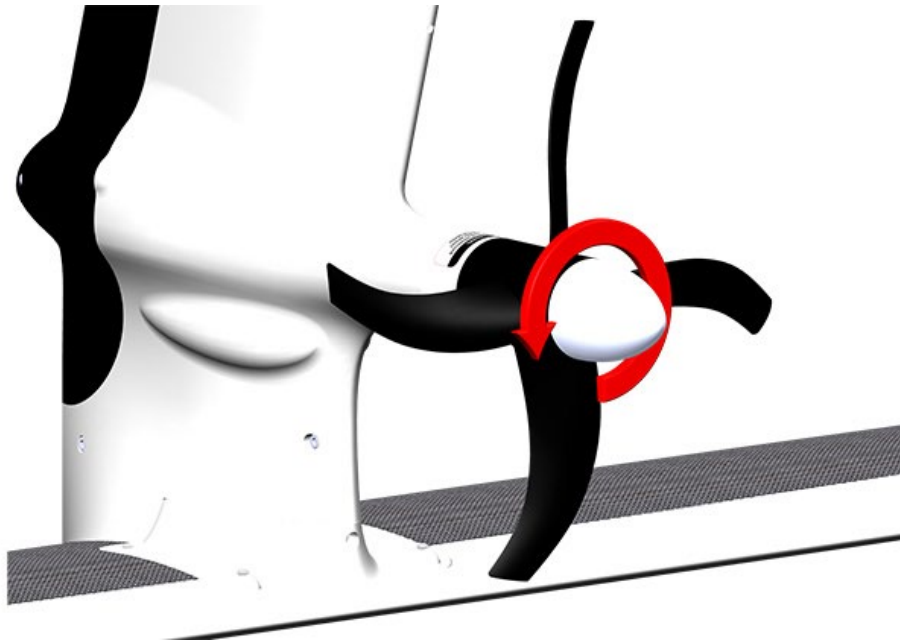

1.2 Loosen and remove the stainless steel M10 nylock nut with washer.

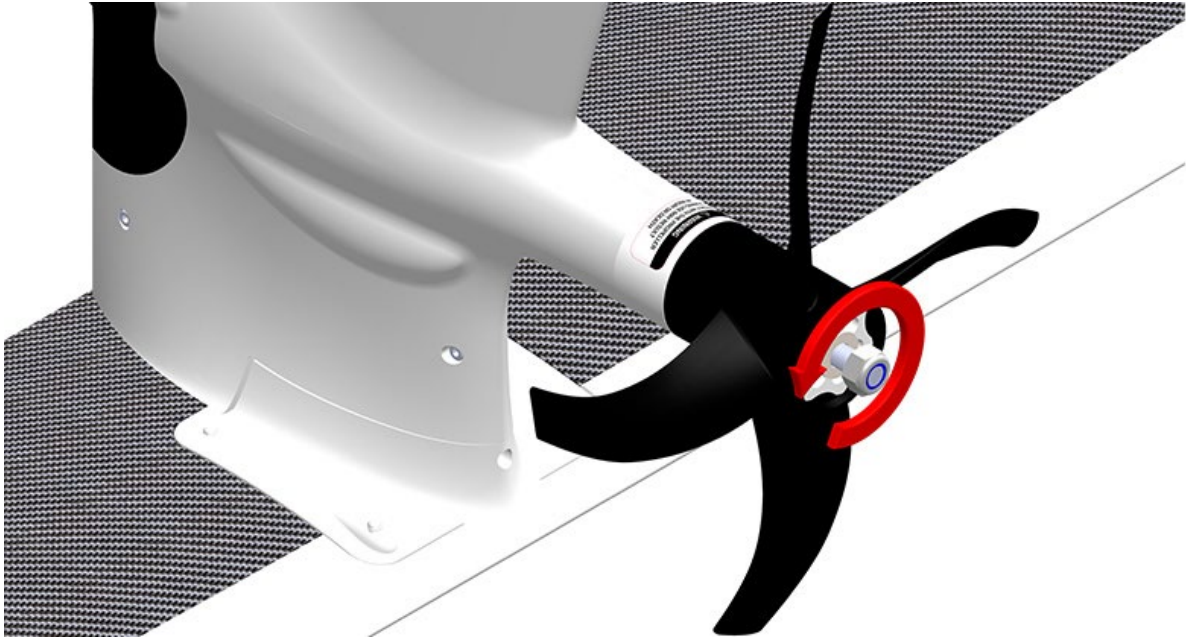

1.3 Remove the Propeller with Hex Block by pulling it forward off the end of the Propeller Drive Shaft.

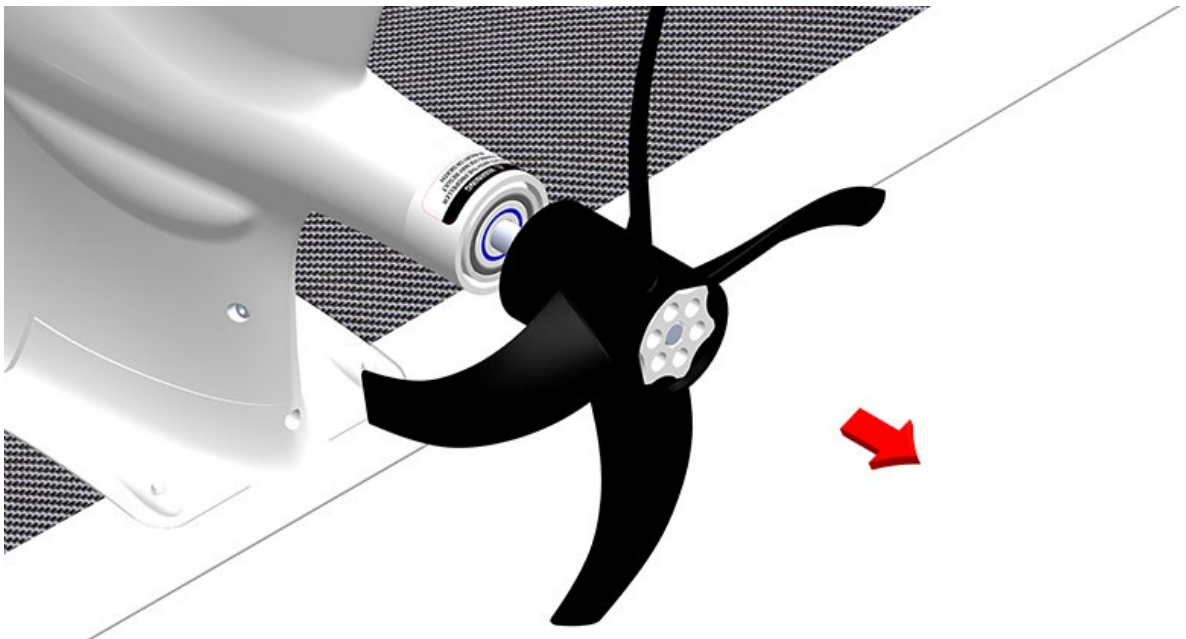

1.4 With the Propeller removed, it is recommended to store the nut and washer on the end of the Drive Shaft, improving safety by creating a blunt end. Tighten by hand only to engage the nylon locking seal and prevent the nut from being lost.

