

## REMOVE PROPELLER DRIVE SHAFT ASSEMBLY

This tutorial shows how to remove the propeller drive shaft assembly from the XE-1.

### 1. Remove Propeller Drive Shaft Assembly

#### TOOLS REQUIRED

ID	Description	Task
	40 mm Open Wrench	Loosen Propeller Drive Shaft Hub

1.1 To remove the Propeller Drive Shaft Assembly, loosen the Propeller Hub by rotating it clockwise. Pull the Propeller Drive Shaft forward to disengage it from the Gearbox Output Shaft. [Tools: 40 mm Open Wrench]

