


This tutorial shows how to remove the Rear RH Buoyancy Module from the XE-1

1. Remove Rear RH Buoyancy (Crank Fitted)

TOOLS REQUIRED


ID	Description	Task
	Long Nose Pliers	Remove Buoyancy Clips

1.1 Remove all seven Buoyancy Clips. [Tools: Long Nose Pliers]

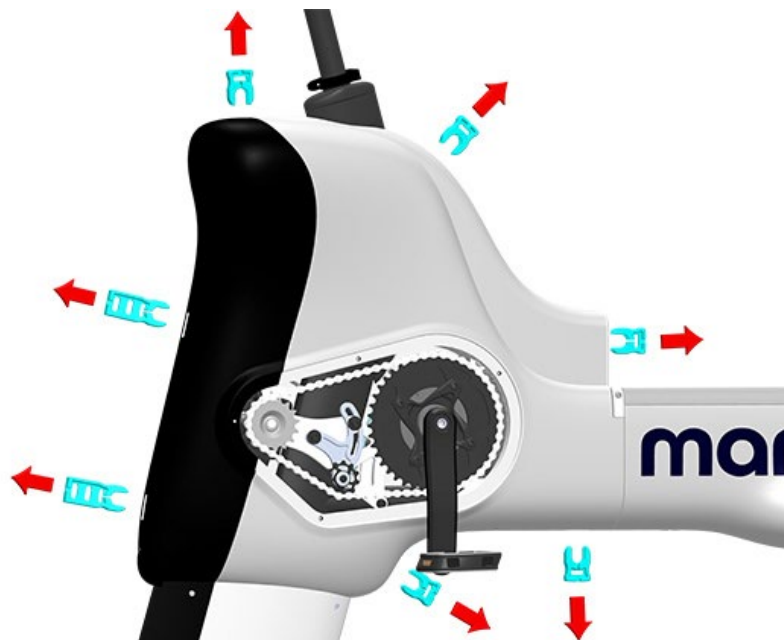

INFORMATION: Make a mental note of the positions where the Buoyancy Clips are removed. It is good practice to remove the white short Buoyancy Clip in front of the Seat Tube last.

1.2 With the crank approximately in the 6 O'clock position, remove the Rear RH Buoyancy module over the Crank and Pedal.

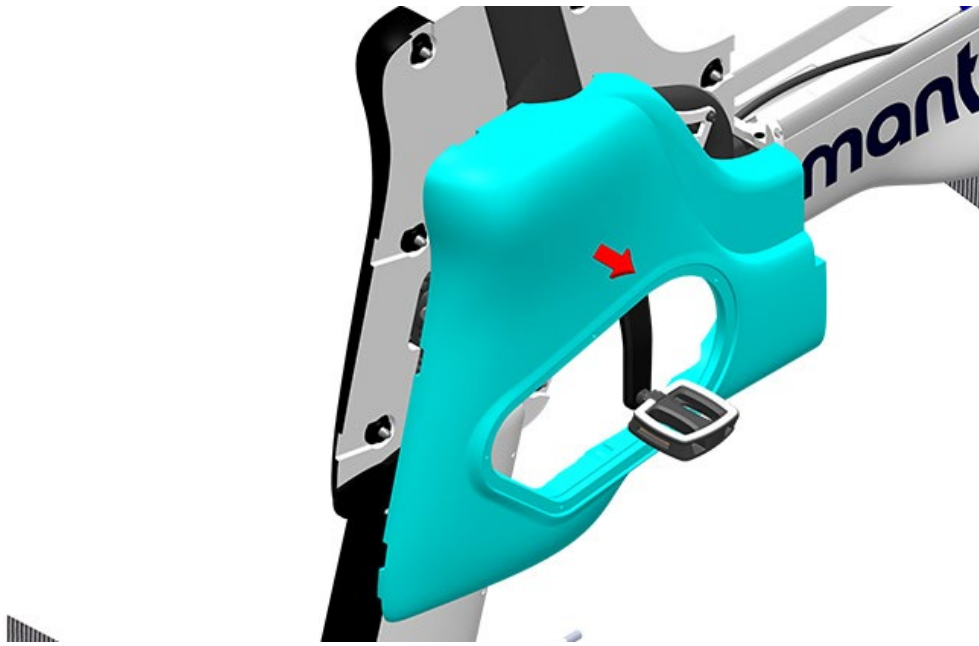

INFORMATION: The transparent Chain Guard must be removed before executing this step. It is possible to remove the RH Rear Buoyancy with the Chain Guard fitted and the RH Crank in the 5 O'clock position but this practice is not recommended as it could lead to component damage.