

## REMOVE SEAT & SEAT POST ASSEMBLY


This tutorial shows how to remove the Seat and the Seat Post Assembly from the XE-1.

### 1. Work Instruction – Remove Seat & Seat Post Assembly

#### TOOLS REQUIRED

ID	Description	Task
	M4 Hex Key	Adjust Seat Tube Clamp

1.1 Loosen the Seat Tube Clamp by pulling the lever to the open position.

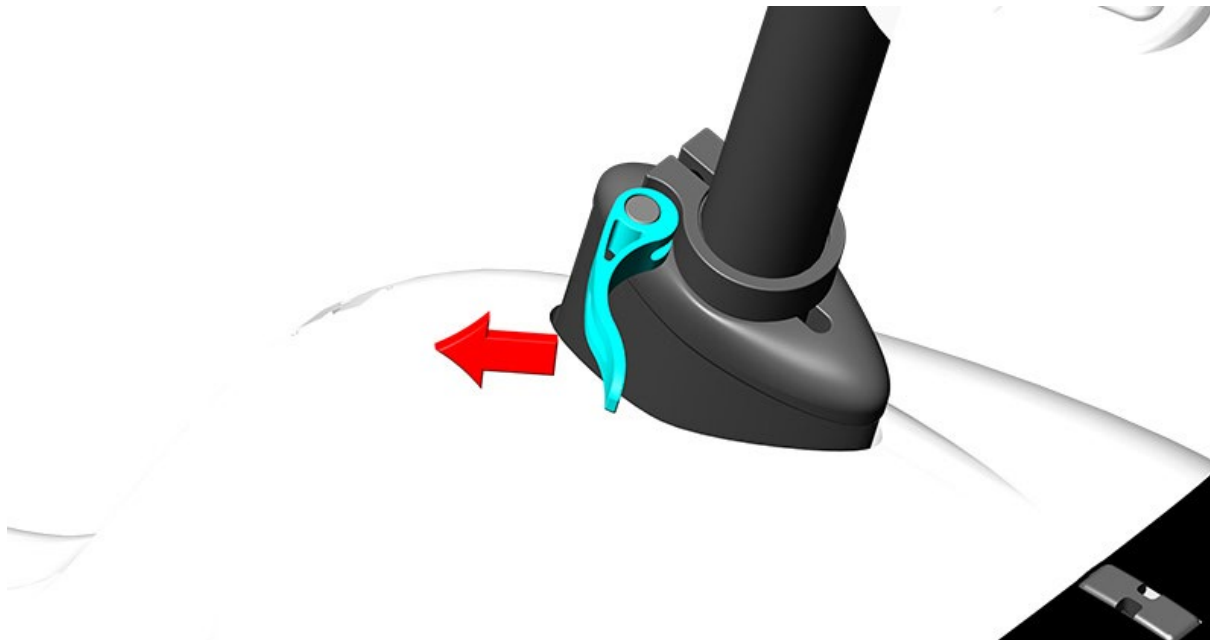

**INFORMATION:** To avoid risk of damaging the Seat Tube Clamp, do not rotate the lever to loosen the clamp further. It is not usually required but the clamp tension can be adjusted with a M4 Hex Key from the RH side.

1.2 Remove the Seat and Seat Post Assembly by pulling the assembly upwards.

