

This tutorial shows how to remove the Vertical Drive Shaft from your XE-1

1. Work Instruction - Remove vertical drive shaft

TOOLS REQUIRED

ID	Description	Task
	N/A	N/A

1.1 To remove the Vertical Drive Shaft, simply pull it upwards to release from the Bottom Gearbox Input Shaft.



INFORMATION: Inspect the Vertical Drive Shaft Bushes on each end for wear or damage. Replace the bushes if damaged before re-using the same Vertical Drive Shaft.