

## How do I replace my Steering Fork Leg Bearings - Method 1

This article shows how to replace the Fork Leg Bearings on the XE-1 Hydrofoiler using a Blind Bearing Puller.

1. Removing the old bearings: [watch video here](#)

### TOOLS REQUIRED

ID	Description	Task
N/A	Pin Punch & Hammer	Punch out Flanged Bushes and inner race of bearings
N/A	Blind Bearing Puller Set with Sliding Hammer	Extract bearing outer race if bearing is broken and inner race of bearing is removed so that only the outer race remain.

2. Fitting the new bearings:

### TOOLS REQUIRED

ID	Description	Task
N/A	M10 x 55mm bolt & nut with large washers with outside diameter > 22 mm	Press bearings into Fork Leg

[Installing fork bearings video](#)