

This article explains the symptoms of a potential fault with the LED light of the battery on/off switch (piezo switch).

The battery switch indicator colors are generated from a combination of three LED lights; Red Green and Blue color. **If the Red LED LED light does not work the missing red colour will result in incorrect/missing colours as follows:**

- purple at startup -> blue
- green is ok -> green
- yellow -> green
- orange -> green
- red (last 25% of battery charge, error indications) -> no LED showing

The battery will still function but the piezo switch needs replacing to restore the correct LED function.

If you are experiencing a faulty piezo switch, [please submit a ticket here](#) and a team member will be in touch shortly.

Watch video below on how to remove the propeller from the drive shaft.

<https://youtu.be/RmlrGbjtChg>