

## FIT PEDALS


This tutorial shows how to fit the Pedals into the XE-1

### 1. Fit left-hand (LH) and right-hand (RH) Pedals

#### TOOLS REQUIRED


ID	Description	Task
	15 mm Pedal Wrench (Park Tool PW4 or PW5 is ideal)	Fasten Pedals

1.1 Fit the Left-Hand Pedal by rotating the pedal shaft anti-clockwise. Fasten to a torque value of 30 Nm.  
[Tools:15 mm Pedal Wrench]

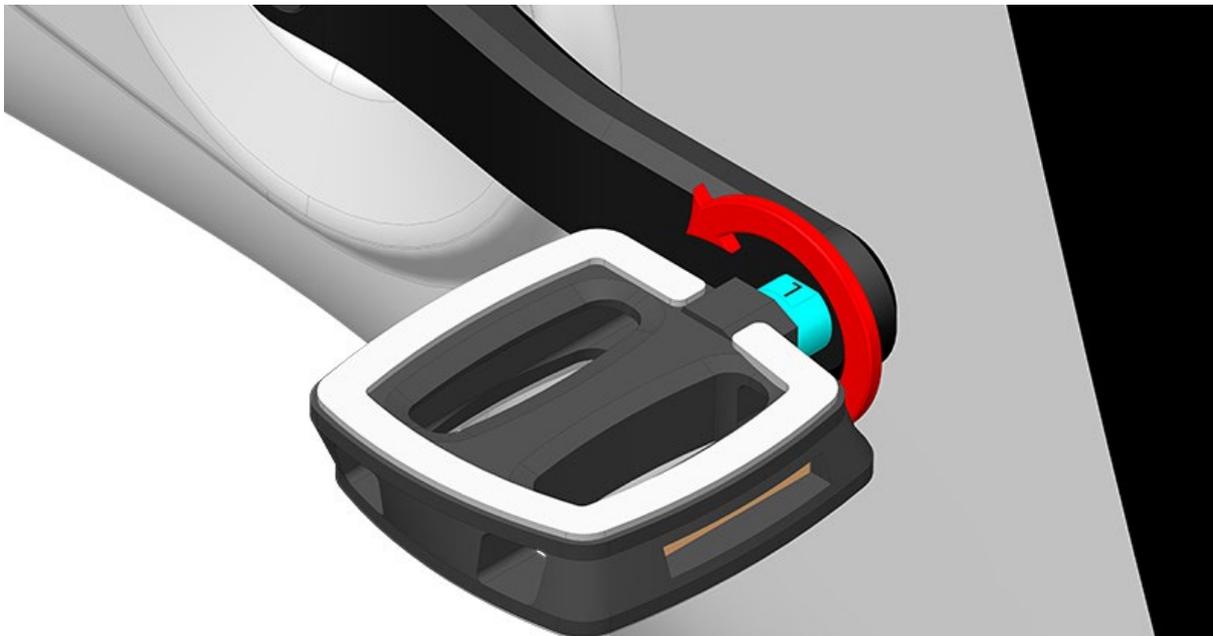

**INFORMATION:** As with standard bicycle parts, the Left-Hand Pedal has a left-hand thread and the Right-Hand Bike Pedal has a right-hand thread. It is strongly recommended that a pedal wrench with a minimum of lever length of 200 mm is used.

1.2 Fit the Right-Hand Pedal by rotating the pedal shaft clockwise.

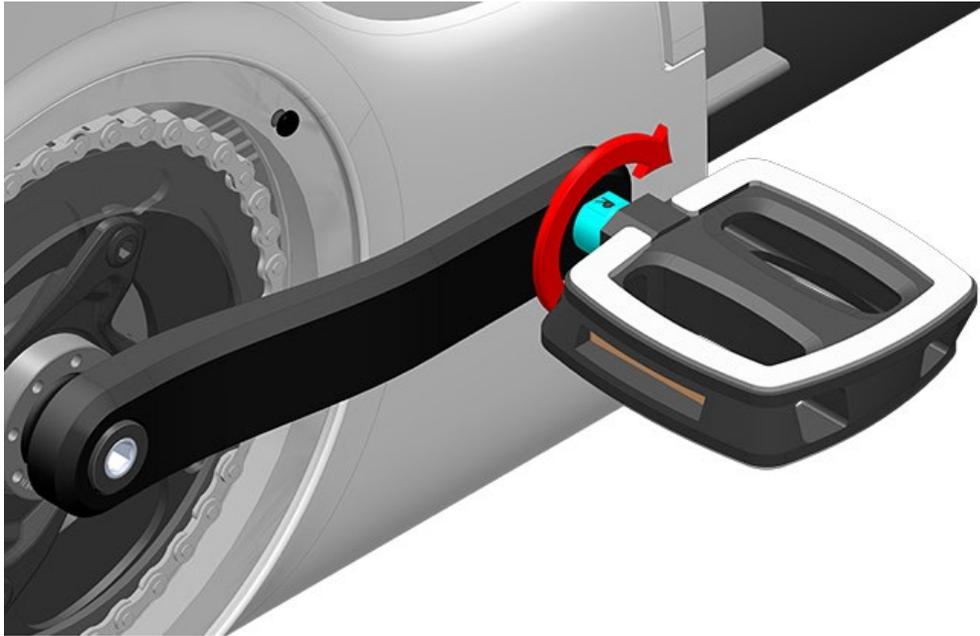

**INFORMATION:** The Right-Hand Pedal and Right-Hand Crank Arm have matching right-hand threads. If the Crank Arm does not accept the Right-Hand Pedal, check the markings on Pedal Shaft and Crank Arm.